 


CT8A63

S+S CT8 Thermal Overload Relay 0.45 to 0.63A Direct Mount
Manual or Auto Reset for CA8 9 to 12A

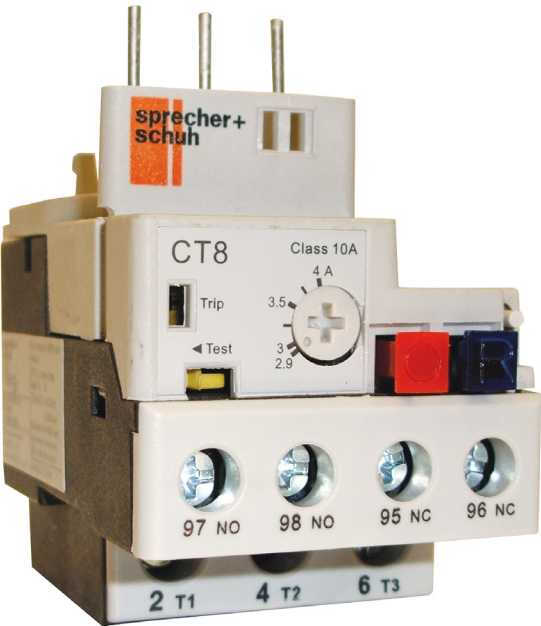

Component type	Thermal overload relay
Range	CT8
Model	N/A
Product status	Existing

The Sprecher + Schuh's CT8 Miniature Overload Relays are a reliable and cost-effective solution for motor protection. Designed to provide exceptional performance and durability in a small footprint, making them ideal for space-constrained installations.

ELECTRICAL

Adjustable current range	0.45-0.63 A
Release class	CLASS 10 A
Max. rated operation voltage Ue	690 V
Number of auxiliary contacts as normally closed contact	1
Number of auxiliary contacts as normally open contact	1
Reset function automatic	Yes
Reset function push-button	Yes
Type of electrical connection of main circuit	Screw connection

CONSTRUCTION

Mounting method	Direct attachment
-----------------	-------------------

DIMENSIONS

Height	65 mm
Width	45 mm
Depth	64 mm
Weight	0.12 kg

CT8A63

 
 
 
 
S+S CT8 Thermal Overload Relay 0.45 to 0.63A Direct Mount
Manual or Auto Reset for CA8 9 to 12A



CONTACTORS

sprecher+schuh

DIMENSIONAL DIAGRAM

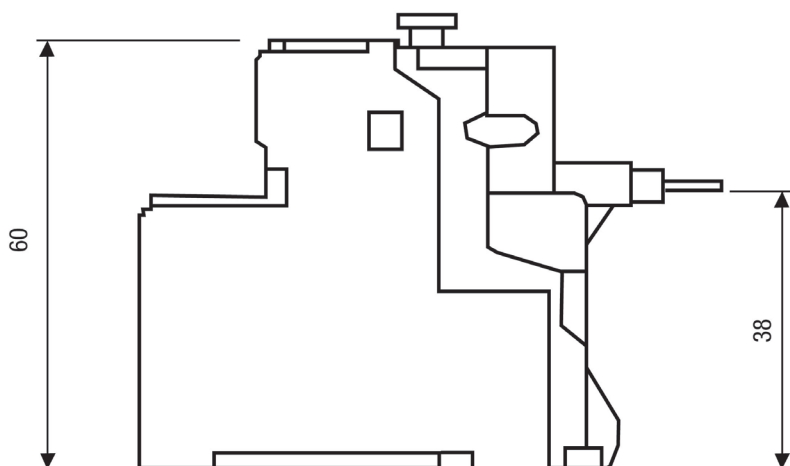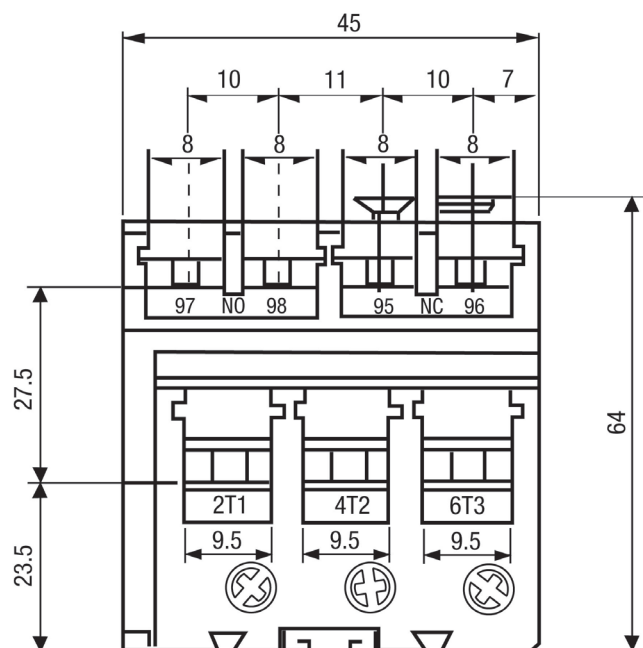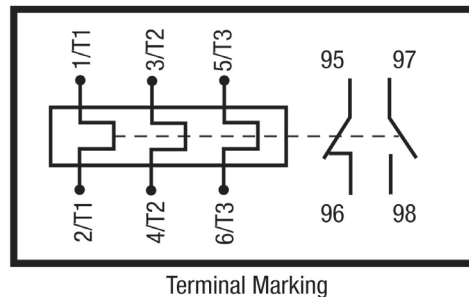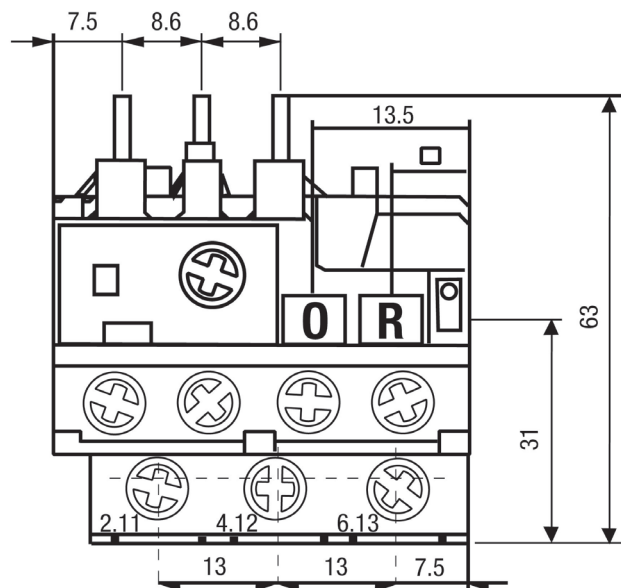

RELATED PRODUCTS

ACCESSORY



Item No: CMR7N110VAC

Required: No

Description: S+S CT7N Reset Magnet 110VAC suits CT7NCT8



Item No: CMR7N12VDC

Required: No

Description: S+S CT7N Reset Magnet 12VDC suits CT7NCT8

CT8A63

S+S CT8 Thermal Overload Relay 0.45 to 0.63A Direct Mount
Manual or Auto Reset for CA8 9 to 12A



CONTACTORS

sprecher+schuh

RELATED PRODUCTS

ACCESSORY



Item No: CMR7N240VAC

Required: No

Description: S+S CT7N Reset Magnet 240VAC suits CT7NCT8



Item No: CMR7N24VAC

Required: No

Description: S+S CT7N Reset Magnet 24VAC suits CT7NCT8



Item No: CMR7N24VDC

Required: No

Description: S+S CT7N Reset Magnet 24VDC suits CT7NCT8



Item No: CMR7N48VDC

Required: No

Description: S+S CT7N Reset Magnet 48VDC suits CT7NCT8



Item No: CT7NRA3

Required: No

Description: Sprecher + Schuh CT7N Adaptor External Reset for use with CT7N and CT8



Item No: D7AD2CE186

Required: No

Description: Sprecher and Schuh D7 Diffuser For Flush IllumPushbutton Reset



Item No: D7AD3CE186

Required: No

Description: Sprecher and Schuh D7 Diffuser for Pilot Light Reset



Item No: D7AD4CE186

Required: No

Description: Sprecher and Schuh D7 Diffuser for Extended Illuminated Pushbutton Reset



Item No: D7AF2CE186

Required: No

Description: Sprecher and Schuh D7 Colour Cap For Flush Non Illuminated Pushbutton 22.5mm Black Reset



Item No: D7AF6CE186

Required: No

Description: Sprecher and Schuh D7 Colour Cap for Flush and Guarded Non illuminated Pushbutton 22.5mm Blue Reset



Item No: D7ATR01

Required: No

Description: Sprecher and Schuh D7 Reset Rod 315 mm Adjustable 34 to 52mm Pusher 10 mm



Item No: D7ATR02

Required: No

Description: Sprecher and Schuh D7 Reset Rod 55 mm Adjustable 50-67 mm Pusher 10 mm



Item No: D7ATR04

Required: No

Description: Sprecher and Schuh D7 Reset Rod 85 mm Adjustable 80-98 mm Pusher 10 mm



Item No: D7ATR06

Required: No

Description: Sprecher and Schuh D7 Reset Rod 115 mm Adjustable 110-128 mm Pusher 10 mm



Item No: D7ATR08

Required: No

Description: Sprecher and Schuh D7 Reset Rod 145 mm Adjustable 141-195 mm Pusher 10 mm



Item No: D7ATR19

Required: No

Description: Sprecher and Schuh D7 Reset Rod 315 mm Adjustable 157-326 mm Pusher 10 mm



Item No: D7MF607MX10

Required: No

Description: Sprecher and Schuh D7 Pushbutton 22.5 mm Complete Metal MOM Flush Blue Cap RESET Non Illuminated 1NO

CT8A63

S+S CT8 Thermal Overload Relay 0.45 to 0.63A Direct Mount
Manual or Auto Reset for CA8 9 to 12A



CONTACTORS

sprecher+
schuh

RELATED PRODUCTS

ACCESSORY



Item No: D7MR2

Required: No

Description: Sprecher and Schuh D7
Pushbutton 22.5mm Metal Reset Rod Operator
Blank Black

Item No: D7MR3

Required: No

Description: Sprecher and Schuh D7
Pushbutton 22.5mm Metal Reset Rod Operator
Blank Green

Item No: D7MR4

Required: No

Description: Sprecher and Schuh D7
Pushbutton 22.5mm Metal Reset Rod Operator
Blank Red

Item No: D7MR6

Required: No

Description: Sprecher and Schuh D7
Pushbutton 22.5 mm Metal Flush Head Reset
Operator Blue

Item No: D7MR607

Required: No

Description: Sprecher and Schuh D7
Pushbutton 22.5mm Metal Reset Rod Operator
Reset Blue

Item No: D7MR611

Required: No

Description: Sprecher and Schuh D7
Pushbutton 22.5mm Metal Flush Head Reset
Operator Blue R

Item No: D7PF607PX10

Required: No

Description: Sprecher and Schuh D7
Pushbutton 22.5 mm Complete Plastic MOM
Flush Blue Cap RESET Non III 1NO



Item No: D7PR2

Required: No

Description: Sprecher and Schuh D7
Pushbutton 22.5 mm Plastic Reset Rod
Operator Blank Black

Item No: D7PR3

Required: No

Description: Sprecher and Schuh D7
Pushbutton 22.5mm Plastic Reset Rod
Operator Blank Green

Item No: D7PR4

Required: No

Description: Sprecher and Schuh D7
Pushbutton 22.5mm Plastic Reset Rod
Operator Blank Red

Item No: D7PR6

Required: No

Description: Sprecher and Schuh D7
Pushbutton 22.5 mm Plastic Reset Rod
Operator Blank Blue

Item No: D7PR607

Required: No

Description: Sprecher and Schuh D7
Pushbutton 22.5mm Plastic Reset Rod
Operator Reset Blue

Item No: D7PR611

Required: No

Description: Sprecher and Schuh D7
Pushbutton 22.5 mm Plastic Flush Head
Round Blue R