LE7251753

Sprecher and Schuh L7 Switch Body 3 Pole Off On Panel Mount 25A



Component type	Off-load switch
Range	L7 Loadbreak Switch
Model	N/A
Product status	Existing

The Sprecher + Schuh L7 line is compact, reliable and the ideal choice for all disconnect applications. All accessories snap-on and off for quick assembly. The L7's modular design allows for multiple combinations and use of universal accessories. Available in base (LA7) and panel (LE7) mount options up to 100A with easy selection, needing only two part numbers to build a complete switch assembly.

ELECTRICAL	Number of poles	3
	Rated operation power at AC-3, 400 V	7.5 kW
	Rated operation current Ie at AC-21a, 690V	25 A
	Rated operation current Ie at AC-1, 690V	25 A
	Ithe, thermal current (enclosed)	32 A
	Ith, thermal current (open)	40 A
	Number of auxiliary contacts as normally closed contact	0
	Number of auxiliary contacts as normally open contact	0
	Number of auxiliary contacts as change-over contact	0
CONSTRUCTION	Model	On/Off switch
	Mounting method	Front mounting
	Material housing	Plastic
	Wire/conductor size, rigid cable	1.5-10 mm²
	Wire/conductor size, flex cable	1.5-16 mm²
	Degree of protection (IP), front side	IP20
	Suitable for front mounting	Yes
	Complete device in housing	No
MECHANICAL	With zero (off) position	Yes
	Mechanical life (service cycles)	200000 cycles
	Number of switch positions	2
DIMENSIONS	Depth	60 mm
	Width	45 mm
	Height	63 mm
ENVIRONMENT	Operating temperature	-25…60 °C


Published on 29 October 2026

LE7251753

Sprecher and Schuh L7 Switch Body 3 Pole Off On Panel Mount 25A

DIMENSIONAL DIAGRAM

LE 7 - panel mounted switches - 3 pole (16 ... 100 A)

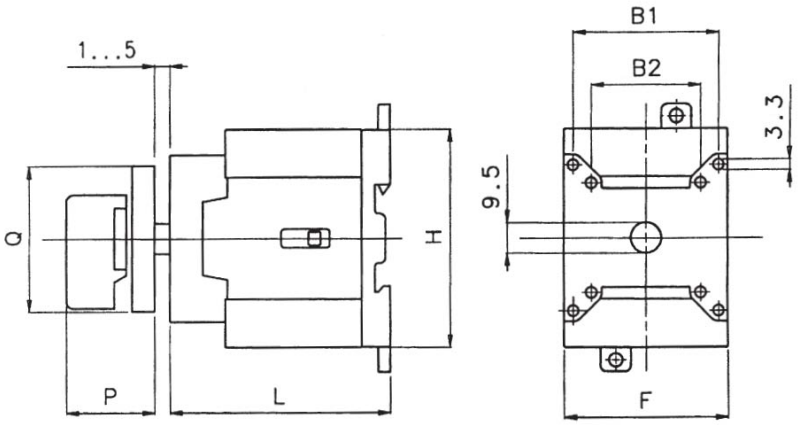

Type	B1	B2	F	H	L
LE 7-16	-	-	36	63	51
LE 7-25/32	-	36	45	64	60
LE 7-40/63	48	36	54	72	74
LE 7-80/100	48	36	72	90	90

Control handles

Cat. No.	Q	P	B
LFS 2-A-4	48 x 48	28	36
LFS 2-E-4	48 x 48	28	48
LFS 2-A-6	64 x 64	28	48
LFS 2-E-6	64 x 64	28	48
LFS 7-N-4-175	54 X 54	28	28
LFS 2-N-6	67 x 67	34	48
LFS 2-G-6	67 x 67	34	48
LFS 7-G-4-175	54 X 54	28	28

RELATED PRODUCTS

ACCESSORY



Item No: L725C3
Required: No
Description: Sprecher and Schuh L7 Terminal Cover 3 Pole suits LE and LA725 and 32 (QTY 1)



Item No: L725C4
Required: No
Description: Sprecher and Schuh L7 Terminal Cover 4 Pole suits LE and LA725 and 32 (QTY 1)

Item No: L7G3660
Required: No
Description: Sprecher and Schuh L7 Mechanical Coupling 6 Pole for L725 and 32



Item No: L7G3687
Required: No
Description: Sprecher and Schuh L7 Shaft Metal 44mm for LA7 and LA2



Item No: L7G3707
Required: No
Description: Sprecher and Schuh L7 Shaft Metal 54mm for LA7 and LA2

Item No: LA2G2830
Required: No
Description: Sprecher and Schuh L2 Cam Switch Shaft Extension Standard 44mm

LE7251753

Sprecher and Schuh L7 Switch Body 3 Pole Off On Panel Mount 25A

RELATED PRODUCTS

ACCESSORY



Item No: LA2G2853
Required: No
Description: Sprecher and Schuh L2 Cam Switch Shaft Extension including Coupling 24mm

Item No: LA2G3194
Required: No
Description: Sprecher and Schuh L2 Cam Switch Shaft Extension Standard 52mm

Item No: LA2G3195
Required: No
Description: Sprecher and Schuh L2 Cam Switch Shaft Extension Standard 57mm



Item No: LA2G3393
Required: No
Description: Sprecher and Schuh L2 Cam Switch Metal Shaft Short Yellow 235mm



Item No: LA2G3394
Required: No
Description: Sprecher and Schuh L2 Cam Switch Metal Shaft Long Yellow 350mm

Item No: LA2G3399
Required: No
Description: Sprecher and Schuh L2 Cam Switch Insert To Modify Metal Shaft to Switch Any Position White



Item No: LE725NP
Required: No
Description: Sprecher and Schuh L7 Fourth Pole for LE725



Item No: LE732PE
Required: No
Description: Sprecher and Schuh L7 Earth Terminal for LE725 and LE732

Item No: LE732TN
Required: No
Description: Sprecher and Schuh L7 Neutral Terminal for LE725 and LE732



Item No: LE7P11
Required: No
Description: Sprecher and Schuh L7 Auxiliary Contact 1 N.O + 1 N.C for LE716 to LE7100



Item No: LE7PD10
Required: No
Description: Sprecher and Schuh L7 Auxiliary Contact 1 N.O E.B for LE725 to LE7100



Item No: LE7PL11
Required: No
Description: Sprecher and Schuh L7 Auxiliary Contact 1 N.O E.M +1 N.C L.B for LE716 to LE7100



Item No: LFC2A4175I
Required: No
Description: Sprecher and Schuh L7 Handle Std Type A BK/Silver Central Nut Mount 48 x 48mm Engraved OFF ON



Item No: LFC2E4175I
Required: No
Description: Sprecher and Schuh L7 Handle Std Padlock Type E BK/Silver Central Nut Mount 48 x 48mm Egvd. OFF ON

Item No: LFC2G6175
Required: No
Description: Sprecher and Schuh L7 Handle Disc Padlock Type G BK/GY Central Nut Mount 67 x 67mm Engraved OFF ON



Item No: LFC2N6175
Required: No
Description: Sprecher and Schuh L7 Handle Disc Padlock Type G RD/YL Central Nut Mount 67 x 67mm Engraved OFF ON



Item No: LFS2A4175
Required: No
Description: Sprecher and Schuh L7 Handle Std Type A BK/Silver Screw Fixing Mount 48 x 48mm Engraved O I



Item No: LFS2A4175I
Required: No
Description: Sprecher and Schuh L7 Handle Std Type A BK/Silver Screw Fixing Mount 48 x 48mm Engraved OFF ON

Published on 29 October 2026

LE7251753

Sprecher and Schuh L7 Switch Body 3 Pole Off On Panel Mount 25A

RELATED PRODUCTS

ACCESSORY



Item No: LFS2A4375

Required: No

Description: Sprecher and Schuh L7 Handle Std Type A BK/Silver Screw Fixing Mount 48 x 48mm Engraved 1 0 2



Item No: LFS2A6175

Required: No

Description: Sprecher and Schuh L7 Handle Std Type A BK/Silver Screw Fixing Mount 67 x 67mm Engraved O I



Item No: LFS2A6175I

Required: No

Description: Sprecher and Schuh L7 Handle Std Type A BK/Silver Screw Fixing Mount 67 x 67mm Engraved OFF ON



Item No: LFS2A6375

Required: No

Description: Sprecher and Schuh L7 Handle Std Type A BK/Silver Screw Fixing Mount 67 x 67mm Engraved 1 0 2



Item No: LFS2E4175

Required: No

Description: Sprecher and Schuh L7 Handle Std Padlock Type E BK/Silver Screw Fixing Mount 48 x 48mm Engraved O I



Item No: LFS2E6175

Required: No

Description: Sprecher and Schuh L7 Handle Std Padlock Type E BK/Silver Screw Fixing Mount 67 x 67mm Engraved O I



Item No: LFS2G6175

Required: No

Description: Sprecher and Schuh L7 Handle Disc Padlock Type G BK/GY Screw Fixing Mount 67 x 67mm Engraved OFF ON

Item No: LFS2L4175

Required: No

Description: Sprecher and Schuh L7 Handle Std Padlock Type L RD/YL Screw Fixing Mount 48 x 48mm Engraved O I

Item No: LFS2L6175

Required: No

Description: Sprecher and Schuh L7 Handle Std Padlock Type L RD/YL Screw Fixing Mount 64 x 64mm Engraved O I